
Instructions for Importing Vehicle Analysis Templates

The following .xml file is available for download on MDT's Load Rating Website:


- **MDT Vehicle Analysis Templates**
  - Includes the following:
    - *MDT ASR/LFR Rating Template*
      - AASHTO HS 20-44 Inventory/Operating, plus inventory/operating levels for all legal loads (Type 3, Type 3S2, Type 3-3, SU4, SU5, SU6, SU7, EV2, EV3)
      - References AASHTOWare BrR standard library vehicle definitions
    - *MDT LRFR Rating Template*
      - AASHTO HL-93 Inventory/Operating, plus all legal loads ((Type 3, Type 3S2, Type 3-3, SU4, SU5, SU6, SU7, EV2, EV3)
      - References MDT Agency-Defined vehicles for EV2 and EV3, and AASHTOWare BrR standard library vehicle definitions for others
        ***Note – must import MDT's Agency-Defined vehicles first*

---


1. From the Bridge Explorer window , select **File → Import System Data**

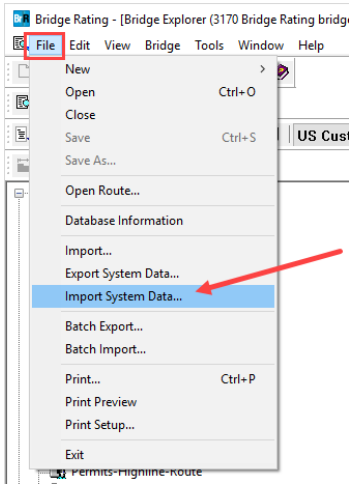


2. Navigate to the location where .xml was downloaded. *(Tip – if the .xml file is not visible, make sure it's extracted from the zipped folder).* Select the template to be imported and click **Open**

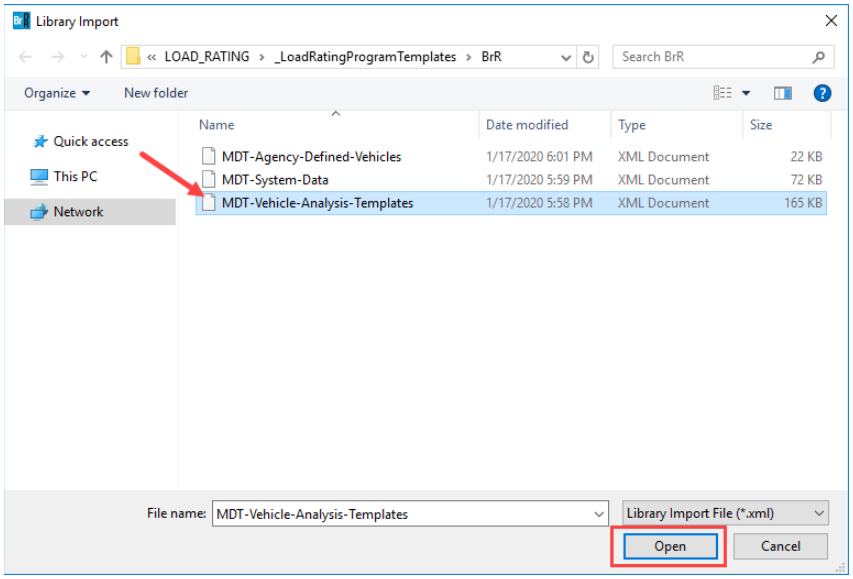

3. Under the "System Data Items" column, select the **Analysis Event Template** folder.

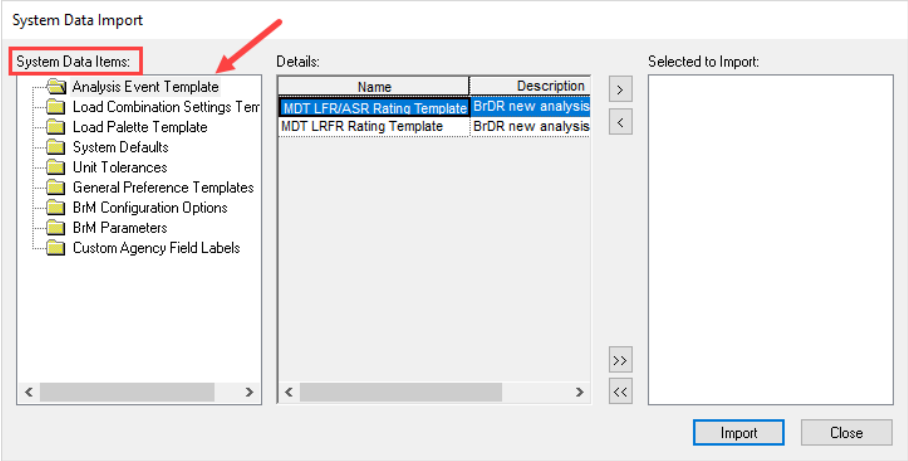

4. Click on the double arrows to import all templates in the folder. *(Tip – single arrows will import only the highlighted template)*. Click **Import**.

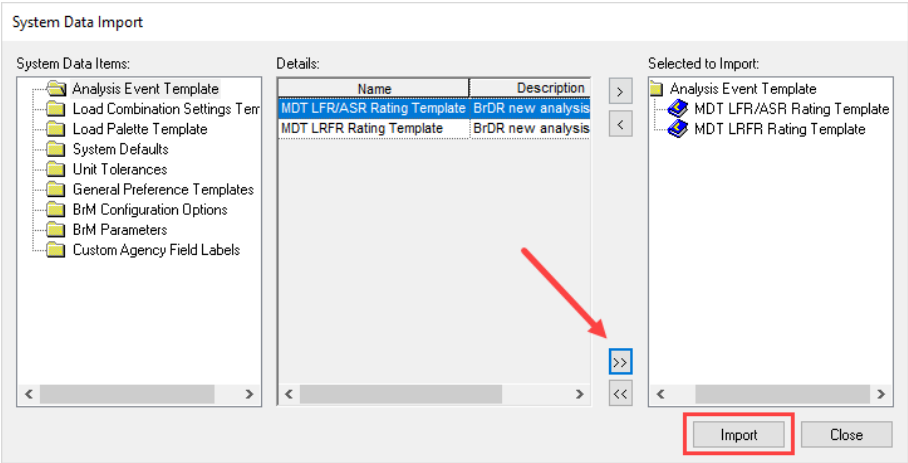

5. If successful, the imported template will be a visible option in the Rate window  → **Open Template**

