
Instructions for Importing System Data

The following .xml file is available for download on MDT's Load Rating Website:


- **MDT System Data**
  - Includes the following:
    - *Unit Tolerances*
    - *BrM Parameters (i.e. pulldown menus in General Bridge Description)*
      - *Admin Area*
      - *County*
      - *Owner/Maintainer (Custodian)*
      - *District*
      - *Functional Class*
      - *NHS Indicator*
    - *Custom Agency Field Labels*

---


1. From the Bridge Explorer window, select **File → Import System Data**

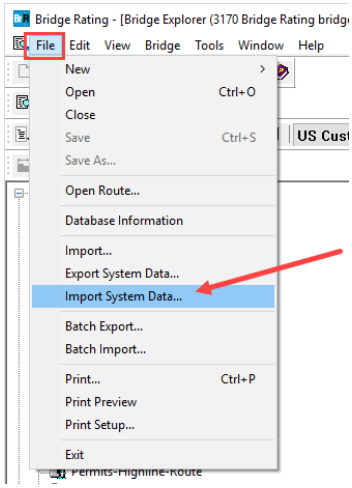

2. Navigate to the location where .xml was downloaded. *(Tip – if the .xml file is not visible, make sure it's extracted from the zipped folder).* Select the template to be imported and click **Open**

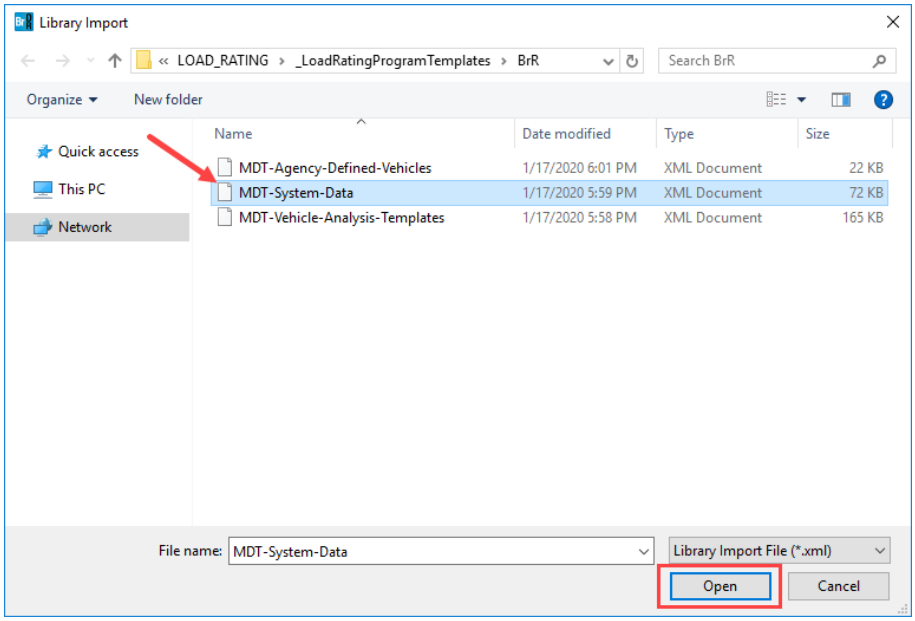

3. Click on the double arrows to import all templates in the **Unit Tolerances, BrM Parameters,** and **Custom Agency Field Labels** folders. *(Tip – you can also select a folder under the "System Data Items" column, and use the single arrow to import only the highlighted template.)* Click **Import**.

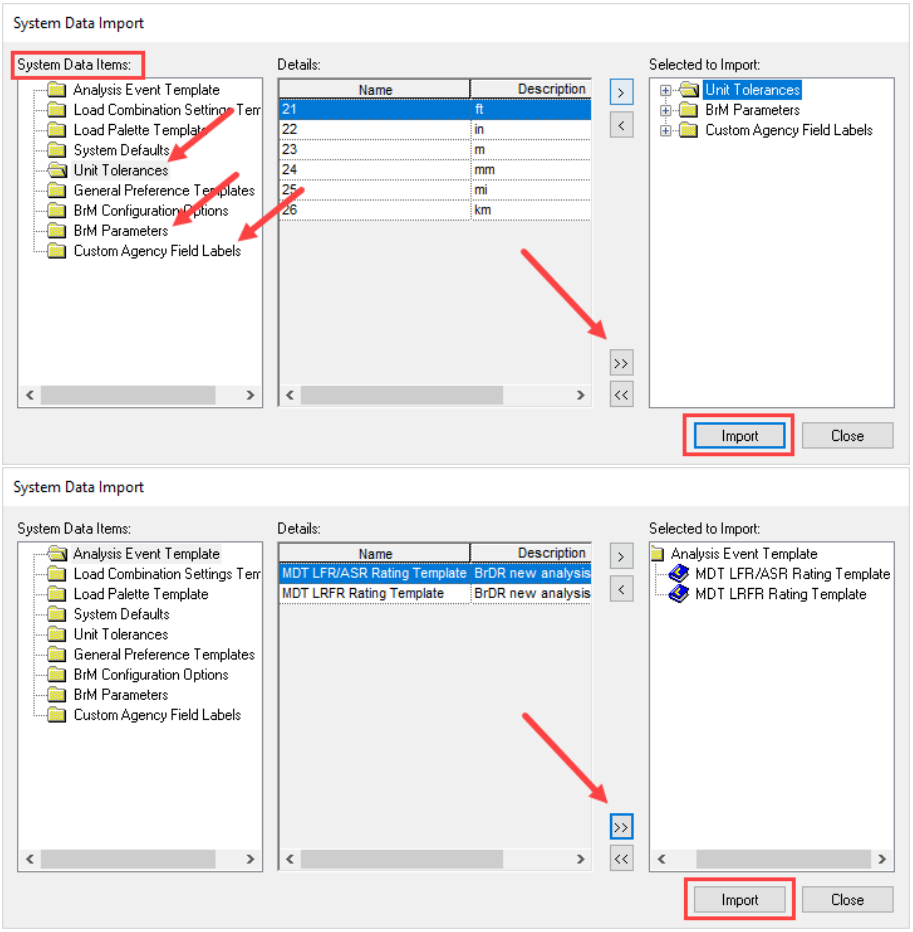

4. If successful, the imported templates will be visible in options in the Configurations Browser , within their respective folders.

