MONTANA
Department of Transportation

Project Development & Delivery - Digital Design and Modeling Services


Tip Guide

Application/Tool(s): MicroStation V8i SS10
Version(s): Version 08.11.09.916
Environment: GEOPAK (Legacy) / OpenRoads (Enhanced) Workspaces
Released/Revised: 4/3/2026

NEED HELP? SUPPORT
Open a Case


UPDATE MICROSTATION LEVELS

If the ByLevel or Override properties of a level are not in sync with the Cadd Standards level library and/or the referenced file, this will be indicated in the Level Manager. A dot will appear in the Modified column of the Level Manager. Hovering over each dot will provide a contextual message with further information. Update the levels as follows.

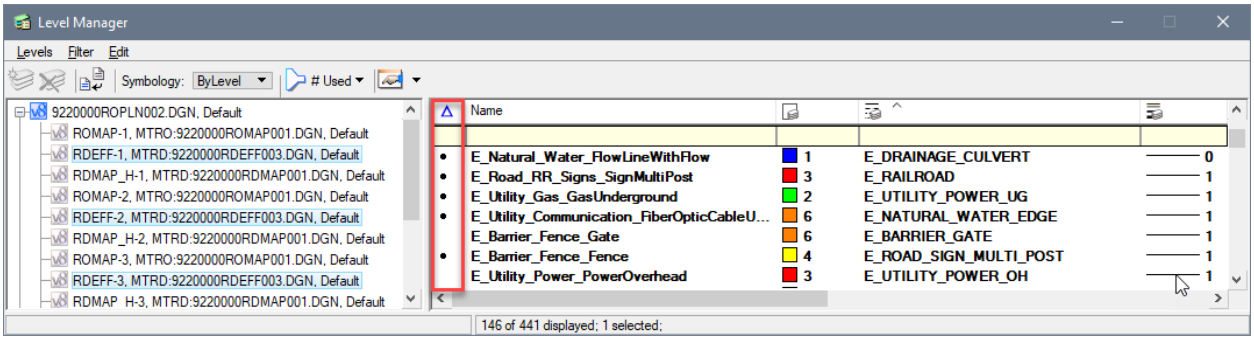

Note: Levels will not be in sync if there has been override adjustments made to the levels for a referenced file. Updating a level with overrides will reset any overrides.

UPDATE MICROSTATION LEVELS

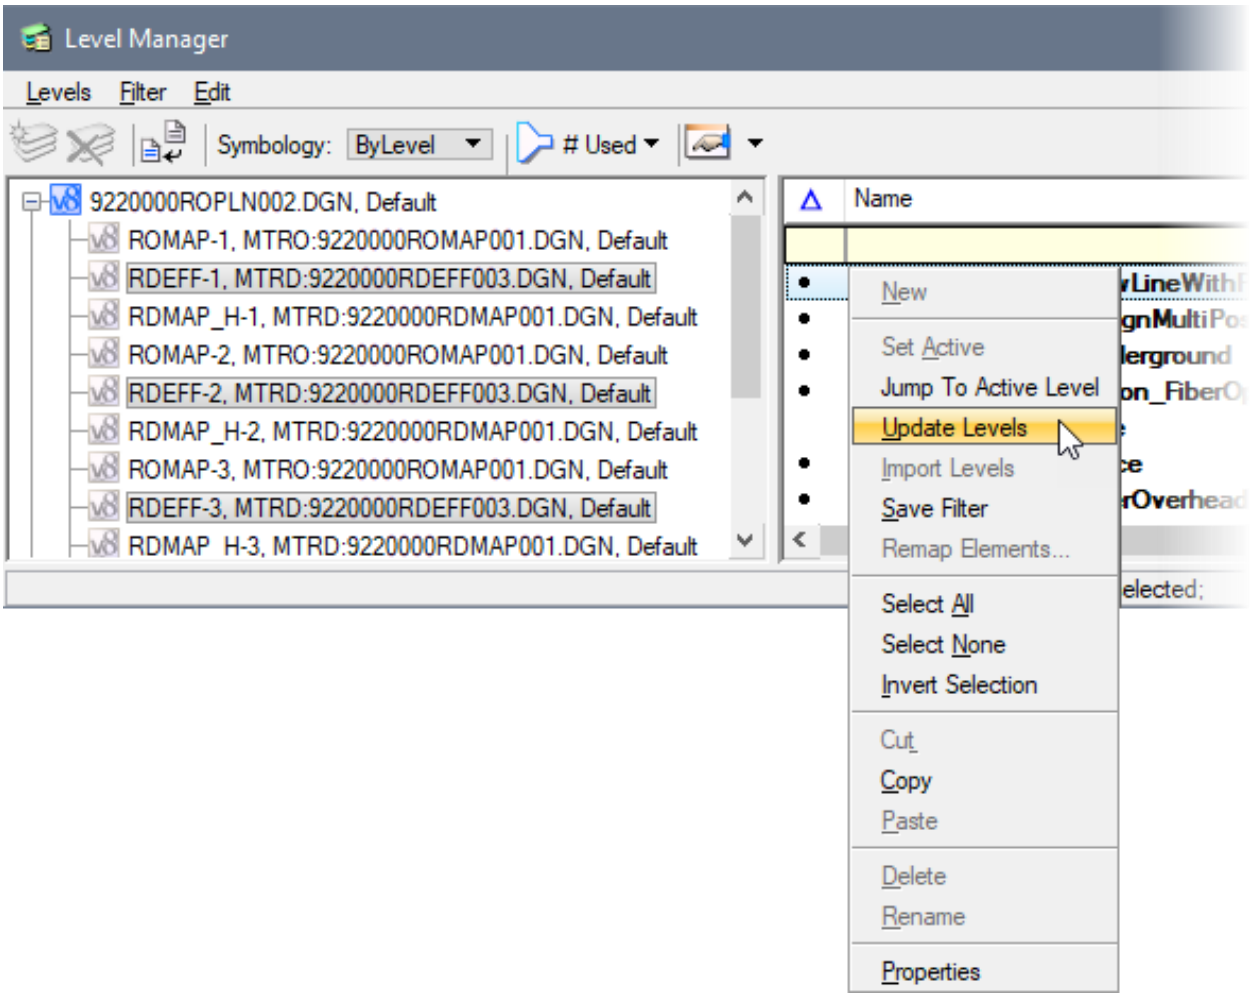

1. Open the **Level Manager** (from the **Primary Tools** toolbar or **Settings** > **Levels** > **Manager**).
2. Select the file(s) from the left and then the level(s) from the right side of the Level Manager that you would like to update. Use Ctrl+Click to select multiple files and levels.
3. Right-click on a selected level and choose **Update Levels**.

Alternatively, the **Update levels from library** button will update all levels in the selected reference file(s) at once.

